

AUTOANCHOR QUICK FIX

If the AutoAnchor is not working, ask the following questions.

1. Are the sensor cables connected? They must be soldered or have AutoAnchor plug-in connectors.
2. Are the other wires connected correctly?
3. Is the unit properly calibrated for the windlass?
4. If it is simply not counting, try running it up and down for 15 seconds which will reset the sensor.

If the problem is still not fixed, contact your supplier or the AutoAnchor manufacturer.

AutoAnchor

PO Box 36 489, Northcote, Auckland, 0748, New Zealand

Tel: +64 9 419 1219

Fax: +64 9 419 1931

Email: info@autoanchor.co.nz

www.autoanchor.co.nz