


AA500 Series Drilling Template

Use for AA500C, AA550RC, AA560

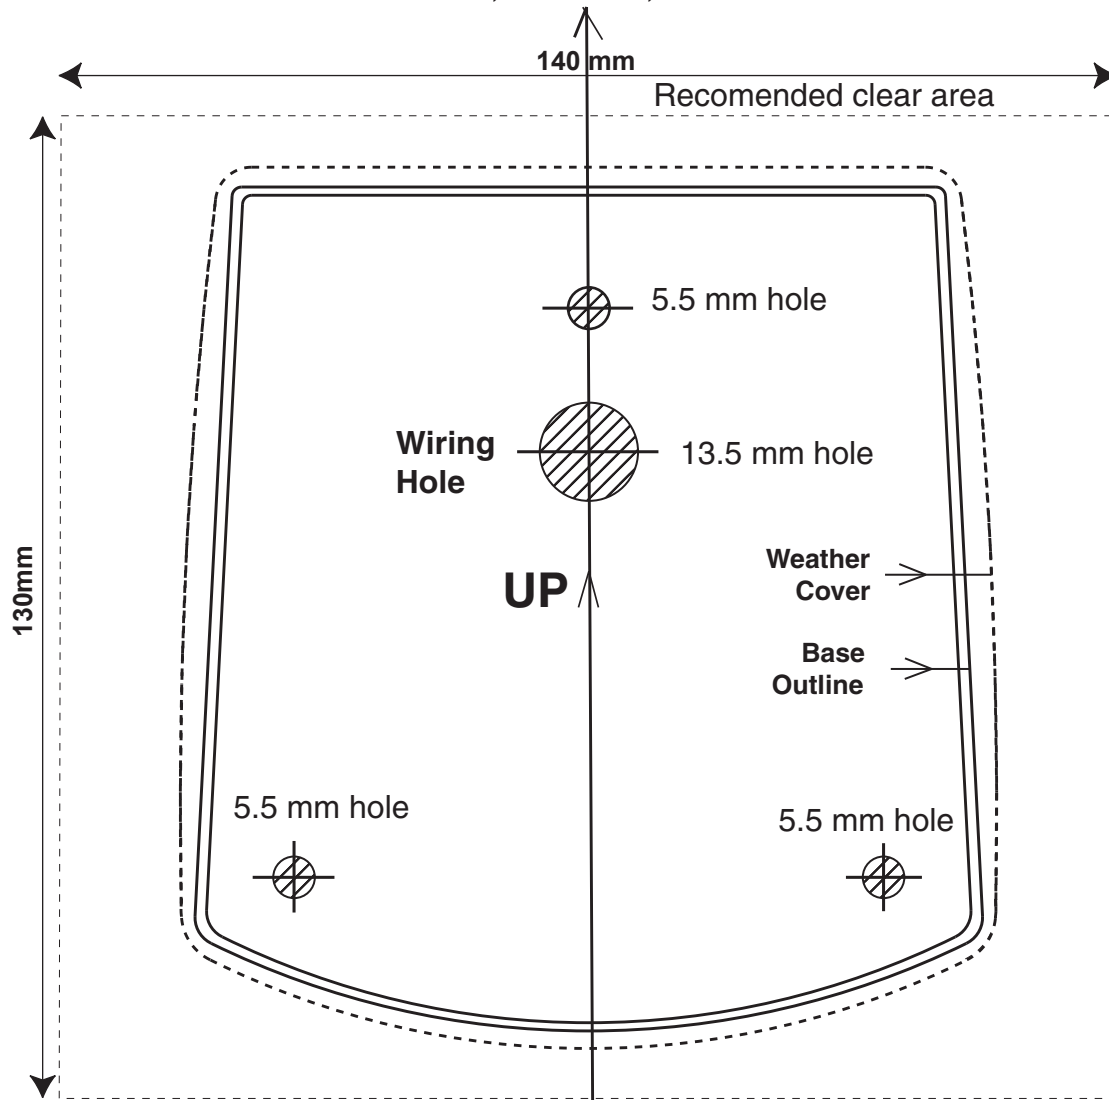

Notes:

- * Mount on a flat surface
- * Do not use sealer or glue
- * Hand tighten mounting bolts
- * Do not use metal studs