


# MAXWELL FREEDOM 500 MAGNET DRILLING TEMPLATE

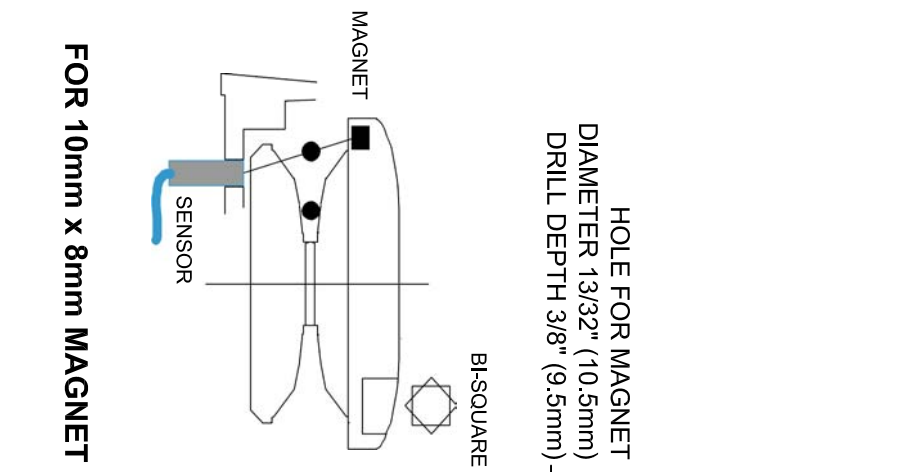

**FOR 10mm x 8mm MAGNET**

HOLE FOR MAGNET MUST BE POSITIONED NEXT TO THE CHAINWHEEL TOOTH EXACTLY AS DRAWN.

**IMPORTANT: DO NOT DRILL HOLE FOR MAGNET BELOW BI-SQUARE**

