AA150.3: AC, HYDRAULIC AND PLC WIRING FOR ALL CHAIN SYSTEM

www.autoanchor.co.nz

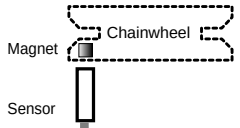

Example windlass drives

Hydraulic Drive

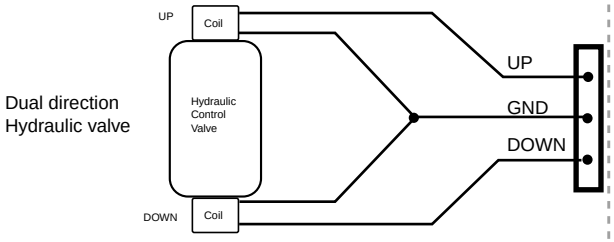

AC electric motor

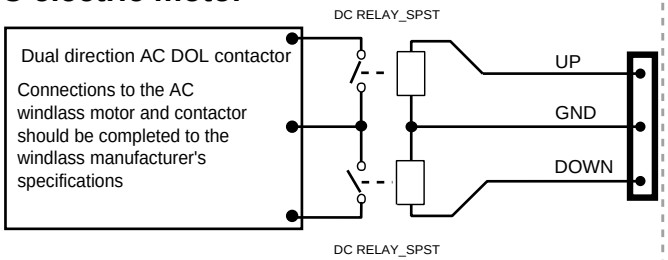

AC VFD, PLC or solid state windlass drive

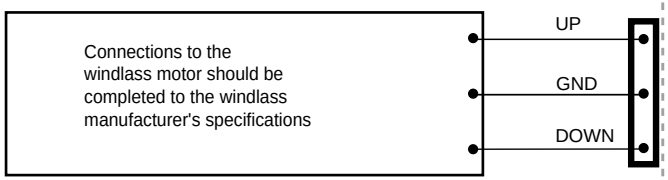

WARNING: Power must be disconnected during installation and when making any changes to wiring after installation

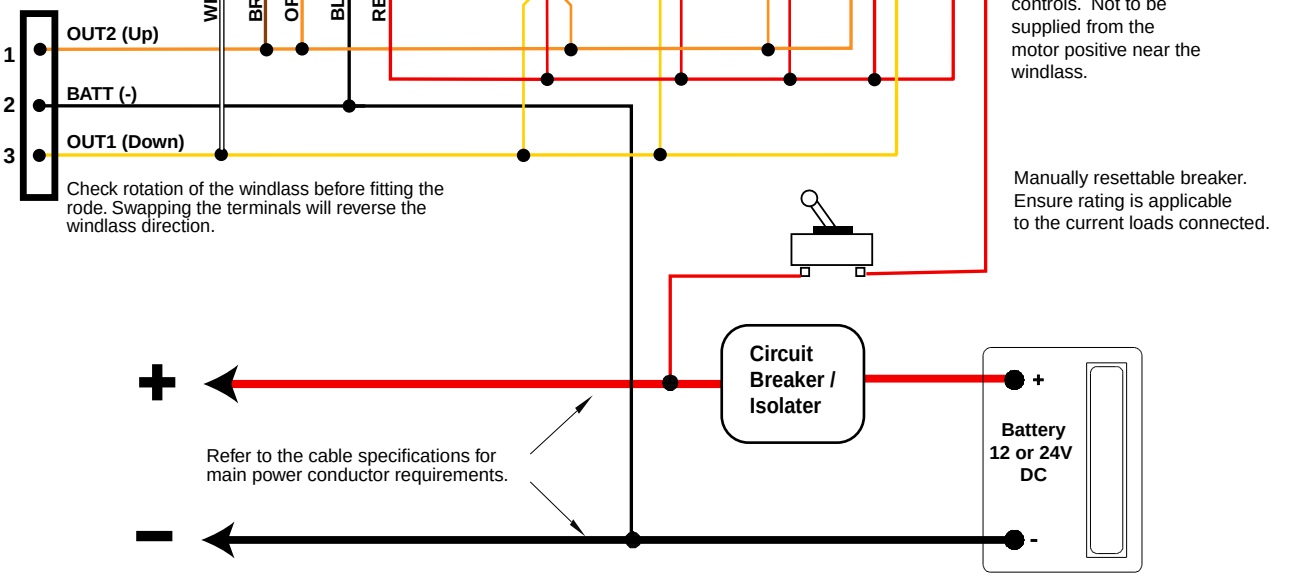

INSTALLATIONS MUST BE CARRIED OUT IN ACCORDANCE WITH USCG, ABYC, NMMA and BMEA REQUIREMENTS